

General Settings

This view shows all the customization settings of the calculator. You can bring it up, at any moment, touching the corresponding “PREF” function on the calculator’s keyboard.

The image displays the 'General Settings' menu for a calculator, organized into three sections: CALCULATOR, FORMATS, and FEEDBACK. Each setting is accompanied by a callout box explaining its function.

Section	Setting	Current Value	Callout Description
CALCULATOR	Model	NEW	Select the calculator skin
	Calculation Logic	CHN	Toggle the operation mode between Chain, Algebraic or RPN
	Autolock Disable	ON	Prevent the device to go to sleep when the calculator is running
	Display Brightness	9	Adjust the display brightness relative to the device screen brightness
FORMATS	Numbers Format	FIX	Select the numbers display format between FIX, SCI, ENG or ALL
	Number of Decimals	2	Set the number of decimals to show
	Decimal Separator	,	Toggles thousands and decimal separator
	Dates Format	M.DY	Select the current date format between M.DY, D.MY or Y.MD
	Angle Unit	DEG	Set the current angle unit between DEG, RAD, GRAD, DMS or Slope%
FEEDBACK	Highlight 'Shift' keys	ON	Set to ON to highlight alternative keyboard functions when Shift key is active
	Haptic Feedback	ON	Set to ON to enable haptic feedback when a button is touched
	Click Sound	ON	Set to ON to enabled a click sound feedback when a button is touched
	Click Volume	10	Adjust the click sound feedback volume relative to the device volume setting
	Effects Sound	ON	Set to ON to enabled an effect sound when some actions occurred
	Effects Volume	5	Adjust the effects sound feedback volume relative to the device volume setting